

SYSTEM

SYSTEM 01 MECH

PL INSTRUKCJA MONTAŻU I EKSPLOATACJI

CZ NÁVOD NA MONTÁŽ A ÚDRŽBU

SK NÁVOD NA MONTÁŽ A ÚDRŽBU

EST PAIGALDUS- JA KASUTUSJUHEND

LT MONTAVIMO IR EKSPLOATAVIMO INSTRUKCIJA

LV MONTĀŽAS UN EKSPLUATĀCIJAS INSTRUKCIJA

DE MONTAGE- UND AUFBAUANLEITUNG

RO INSTRUCȚIUNI DE MONTAJ ȘI OPERARE

HU SZERELÉSI ÉS ÜZEMELTETÉSI ÚTMUTATÓ



UA ІНСТРУКЦІЯ З МОНТАЖУ І ЕКСПЛУАТАЦІЇ



BY ІНСТРУКЦЫЯ ПА МАНТАЖЫ І ЭКСПЛУАТАЦЫІ

RU ИНСТРУКЦИЯ ПО МОНТАЖУ И ЭКСПЛУАТАЦИИ


EN INSTRUCTIONS FOR ASSEMBLY AND USE

FR INSTALLATION ET UTILISATION - MODE

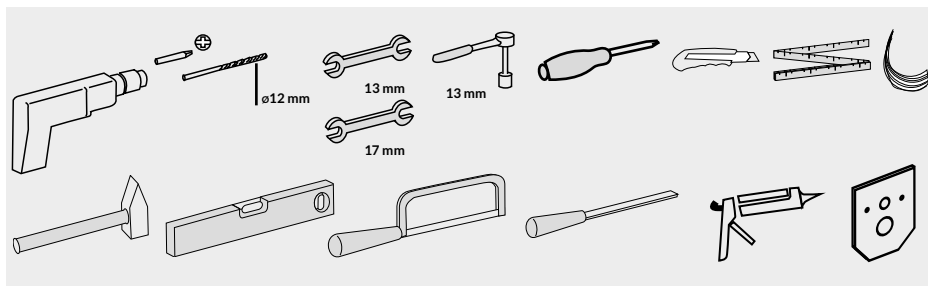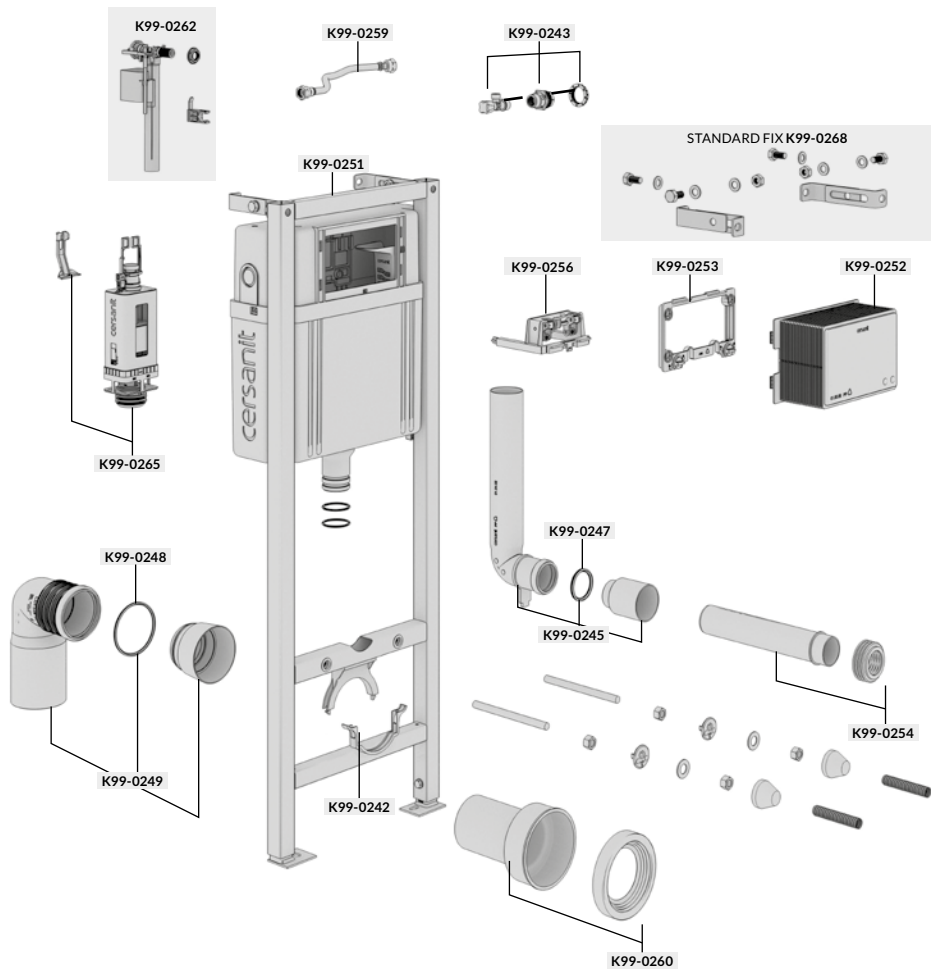


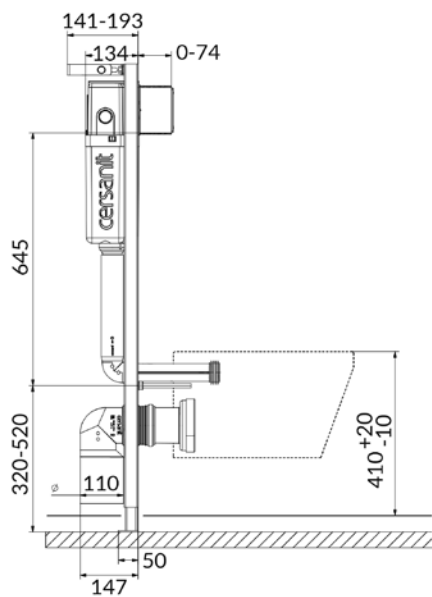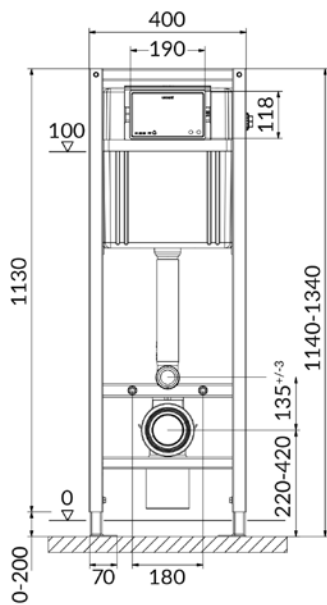



1.1

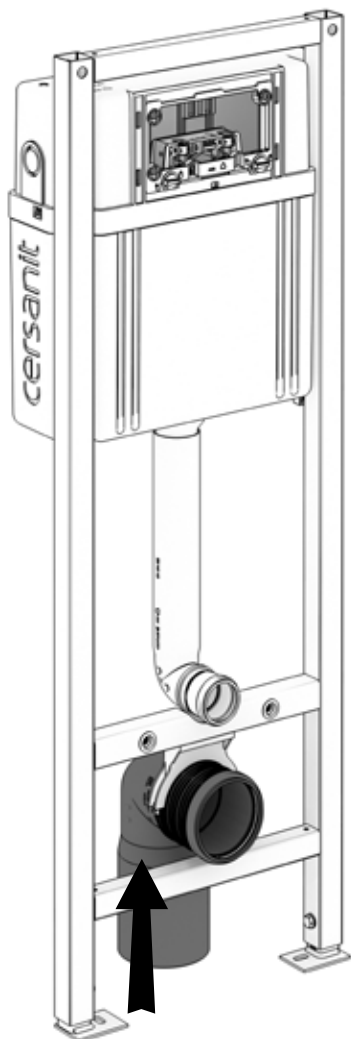


 
1.2

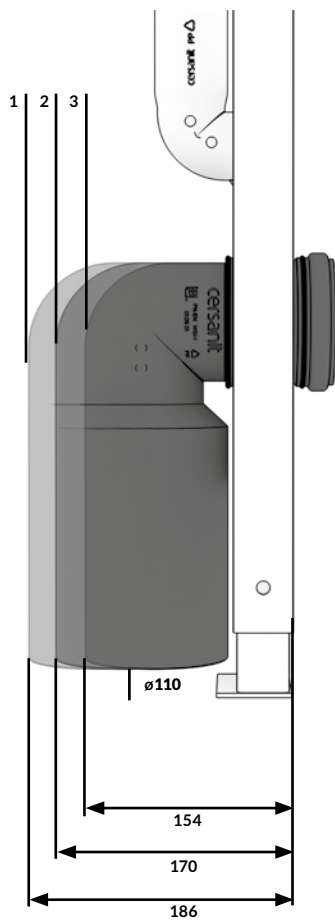

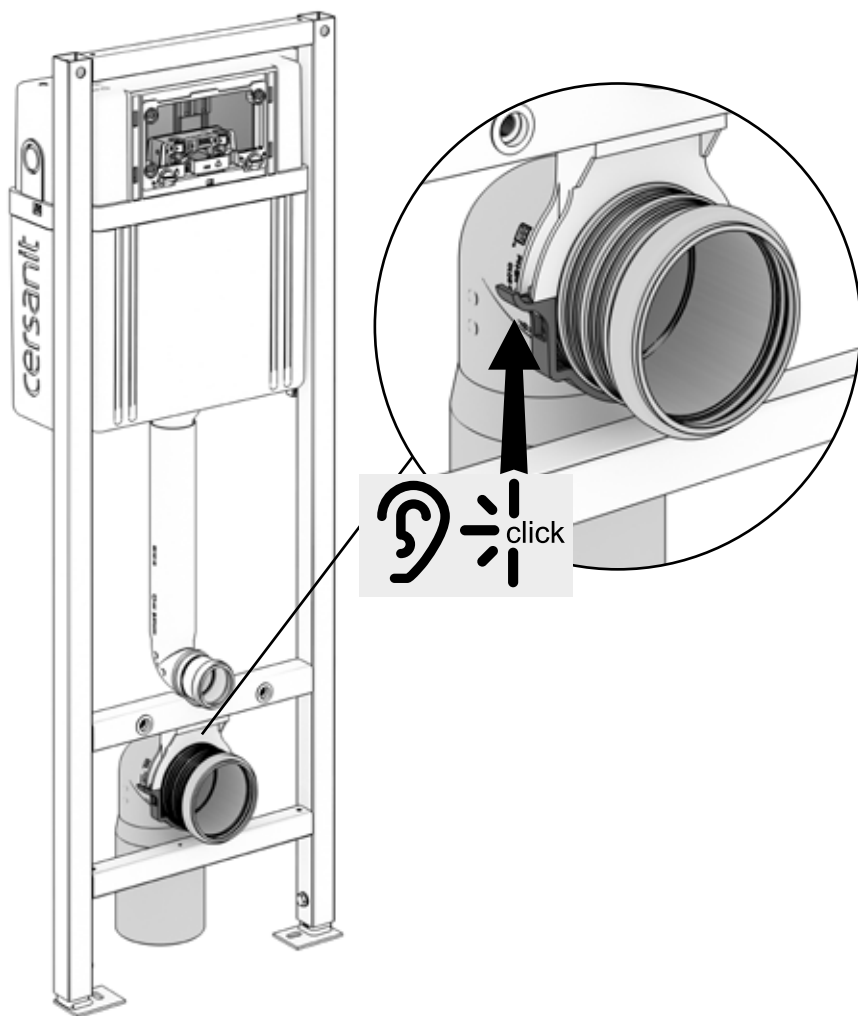

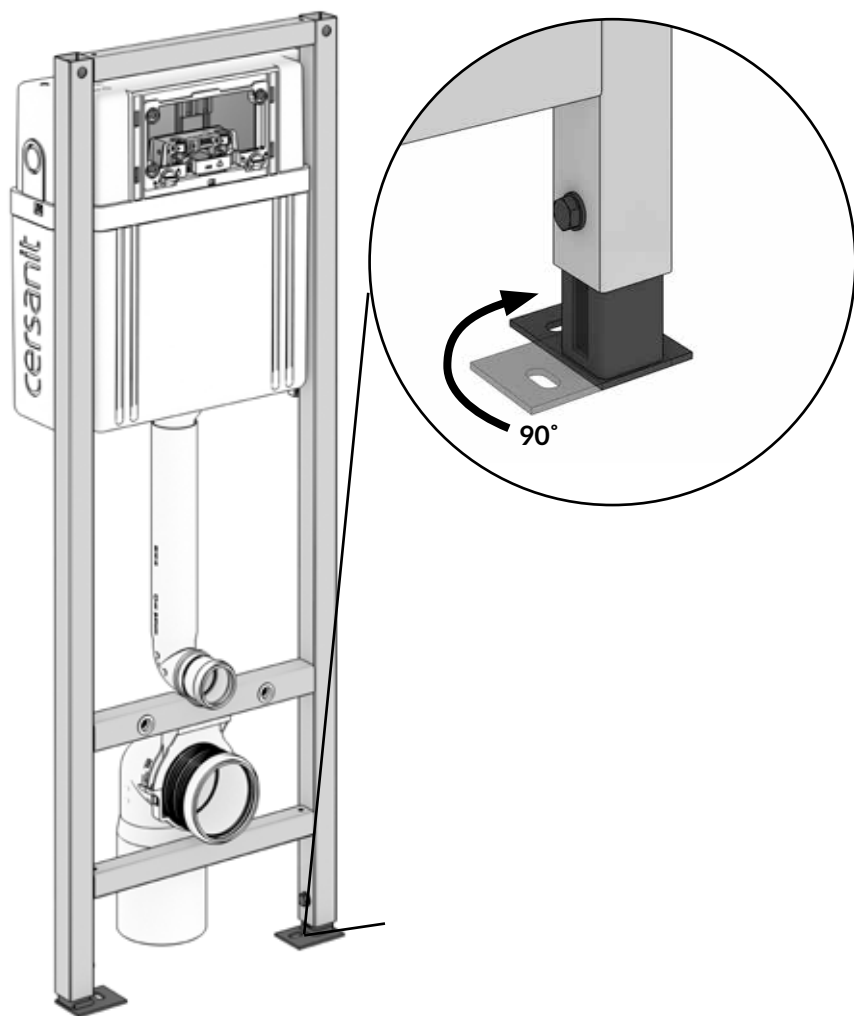
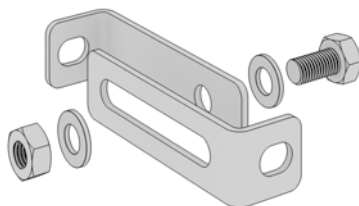
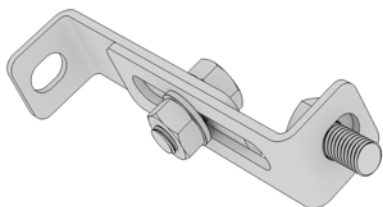


2.3

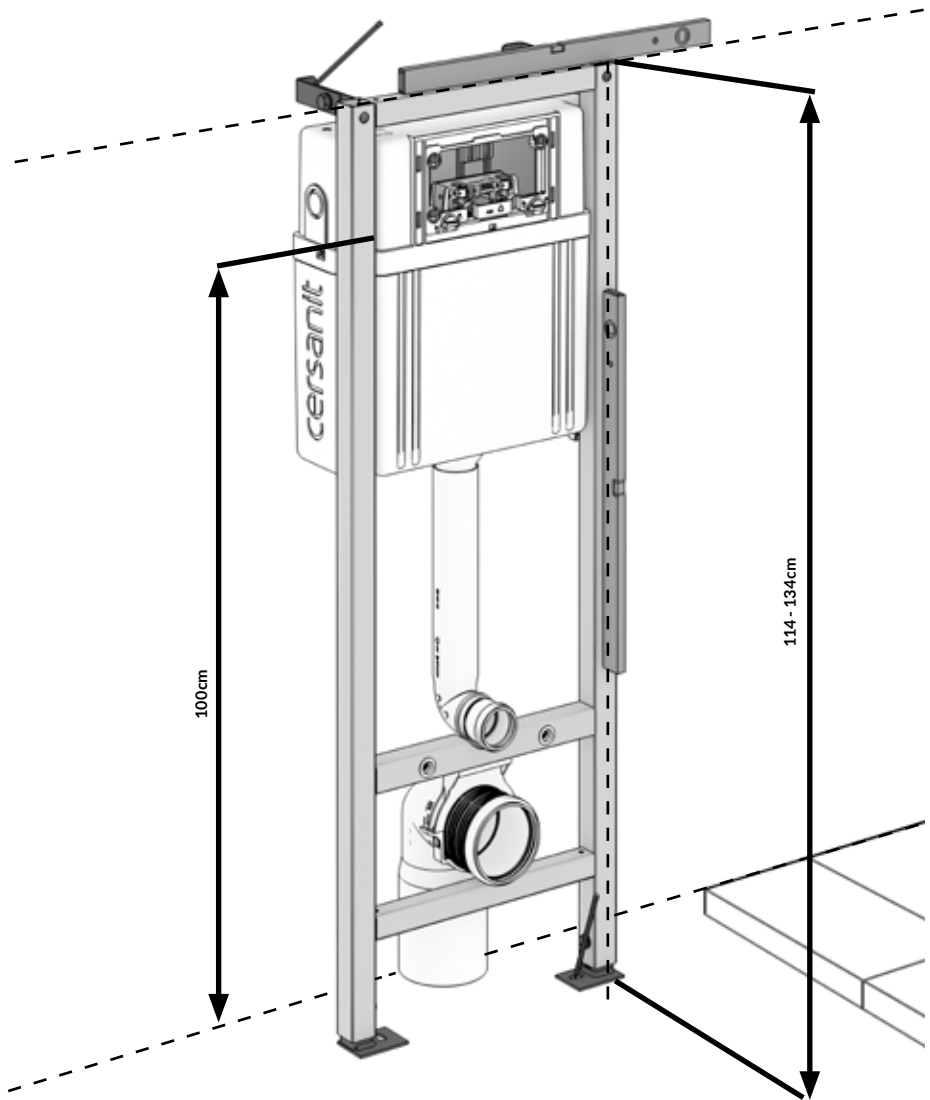


4  17 x2


4.1   17 x2



4.2  17 x2

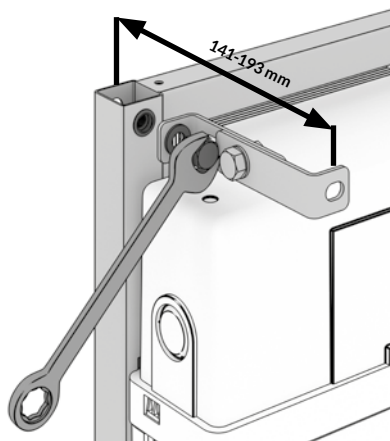

 
4.3



5

 Ø12

 x4

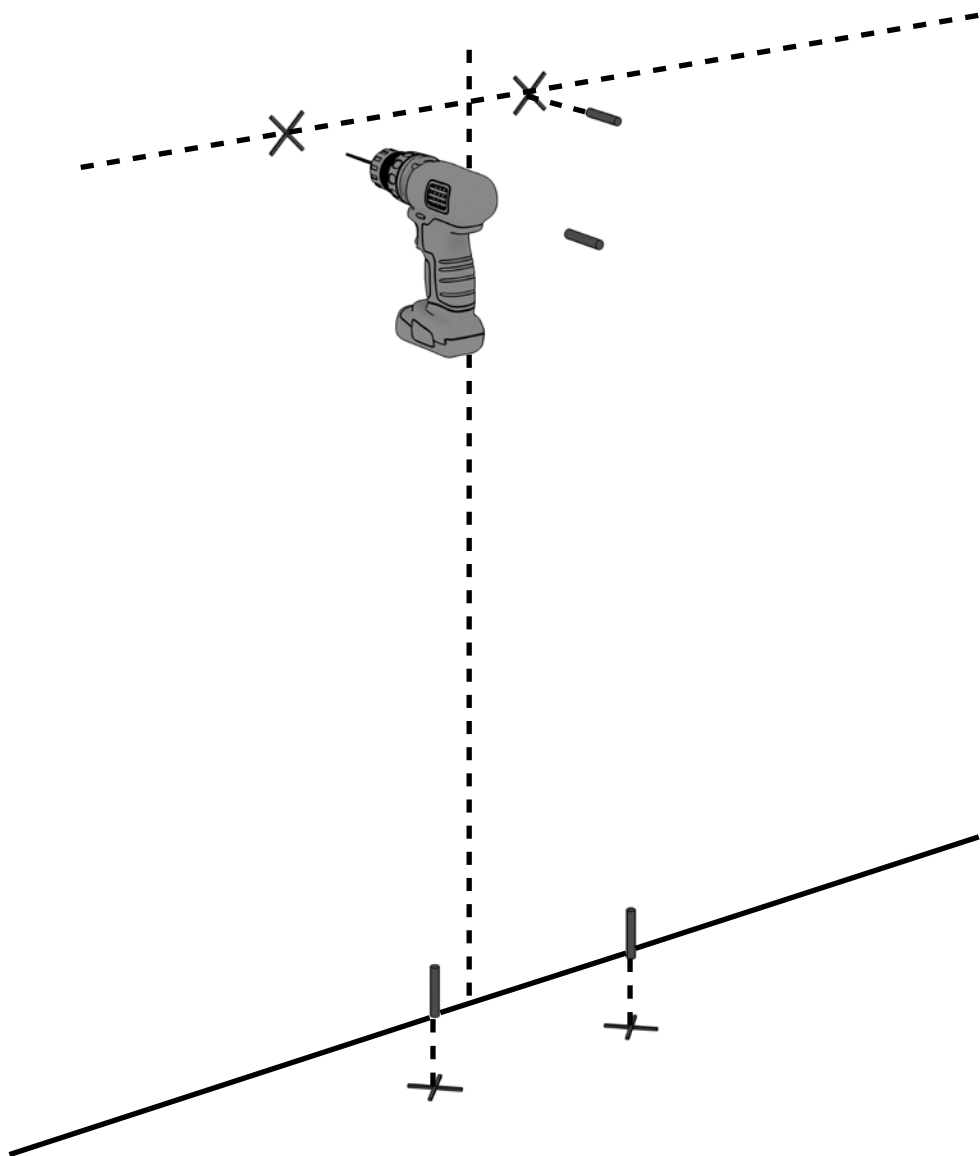

6



13




13




x4




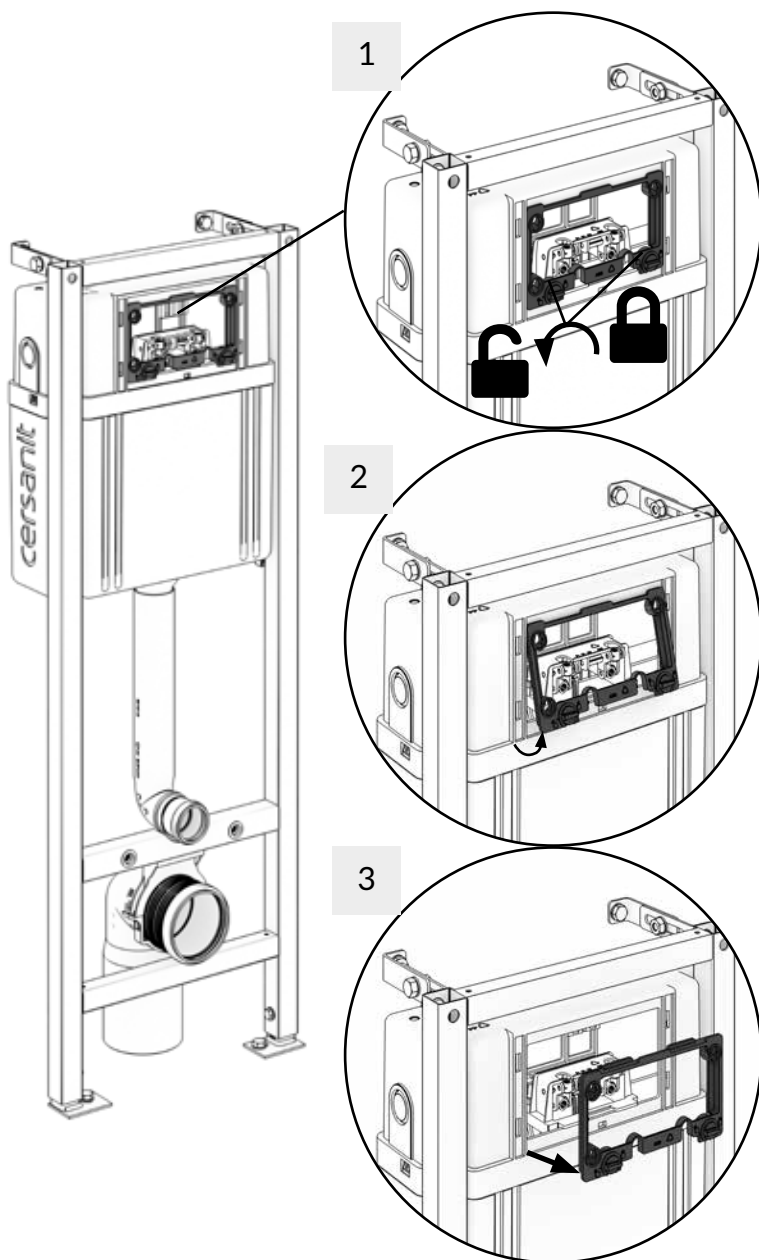

1

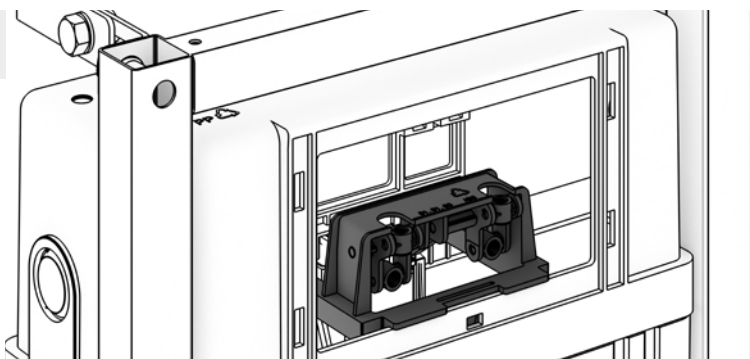


2

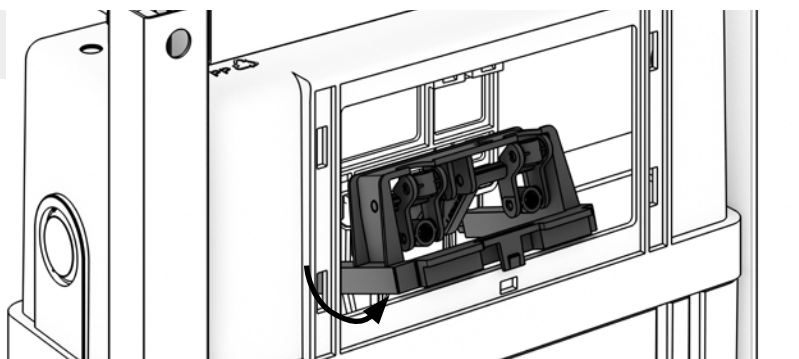


3





1

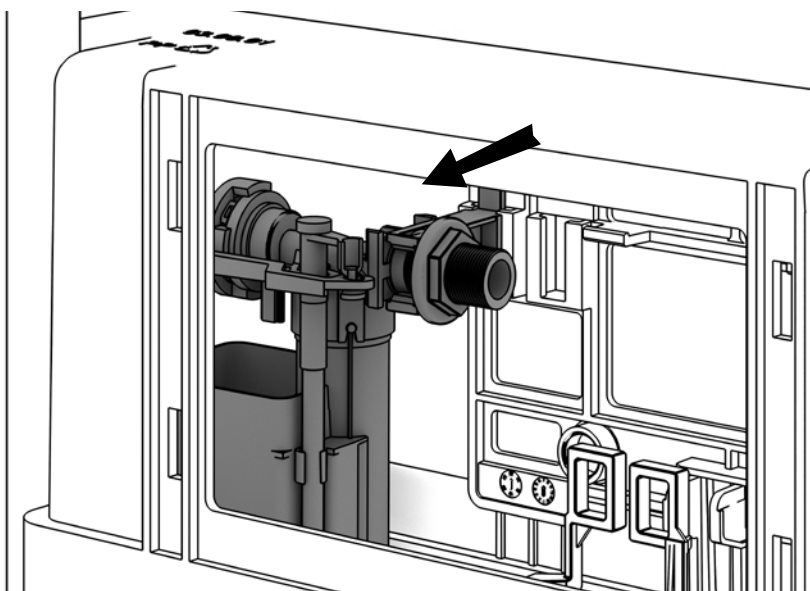

2


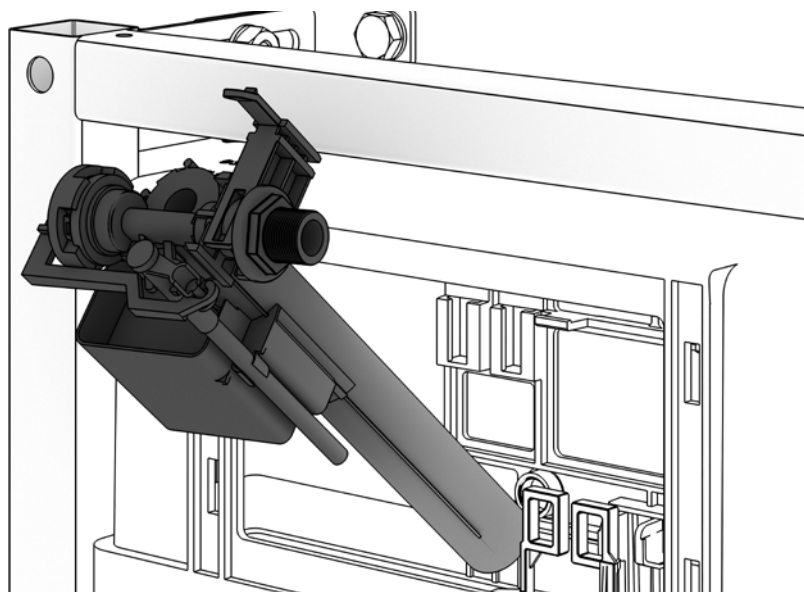


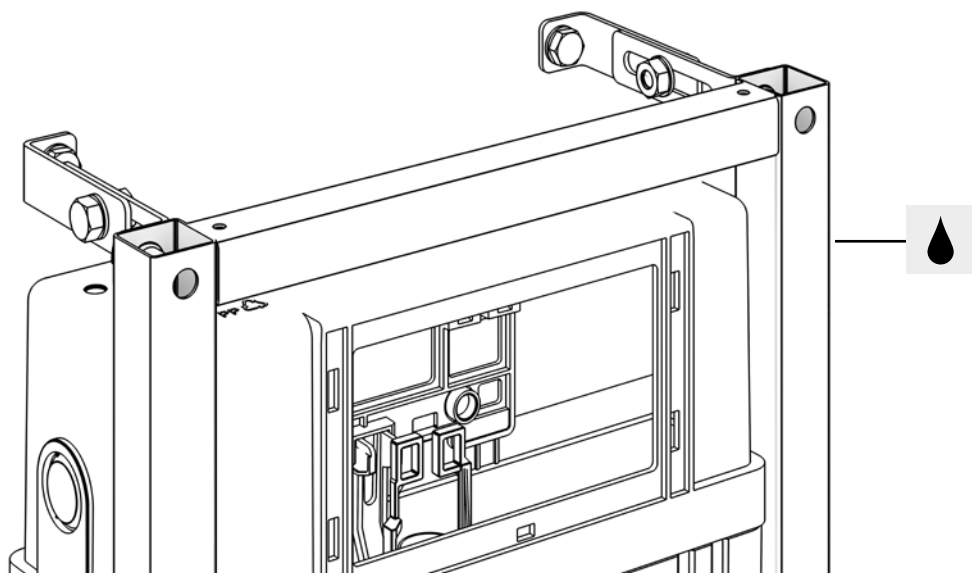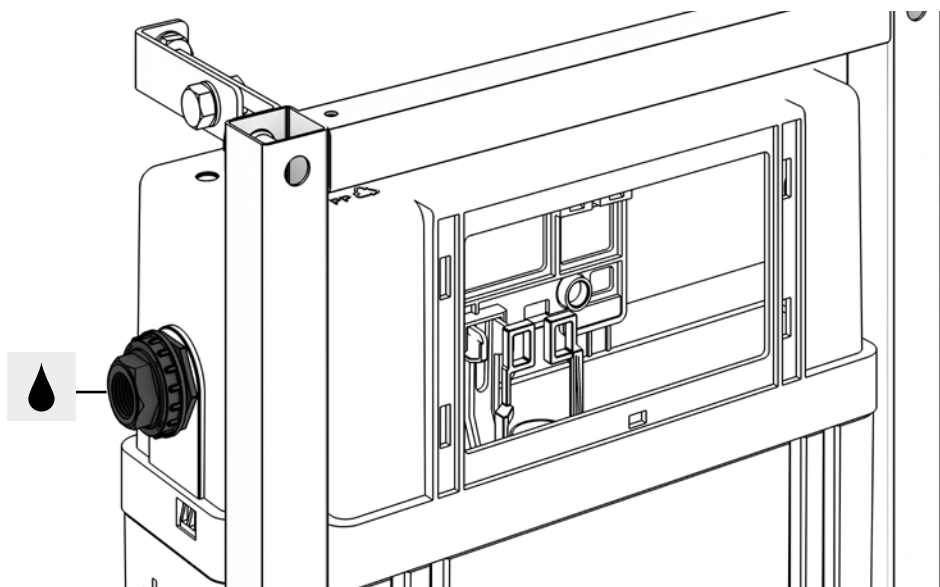


11



 
1

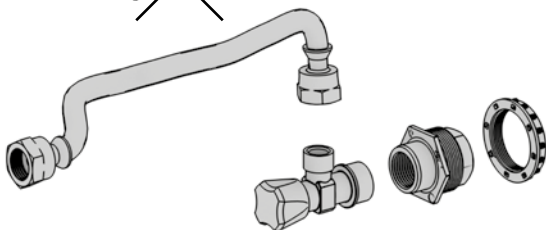




2

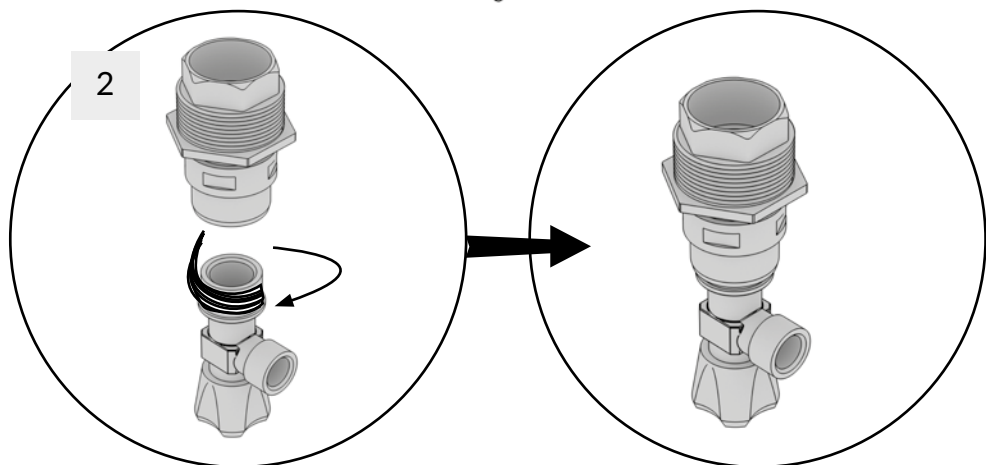


3

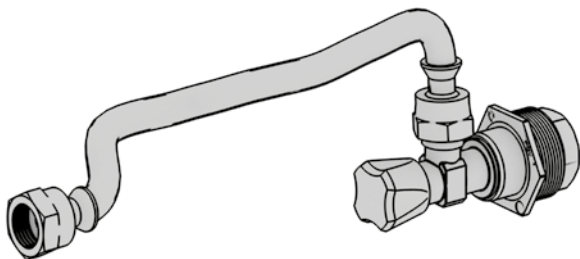

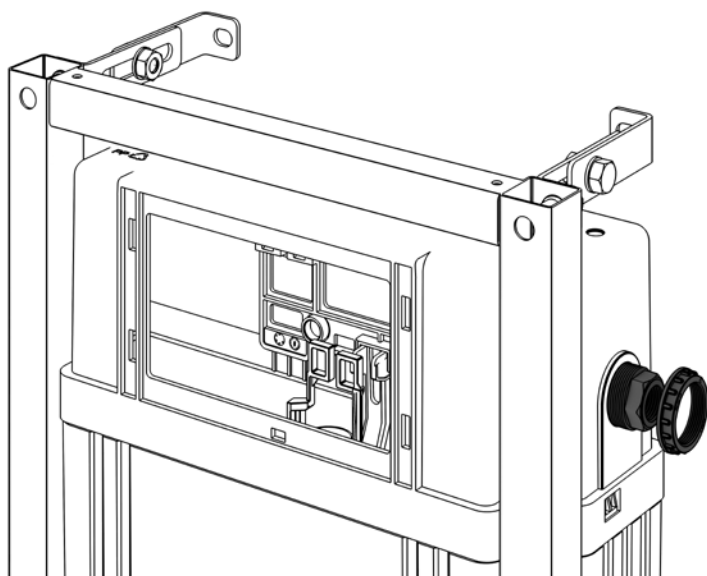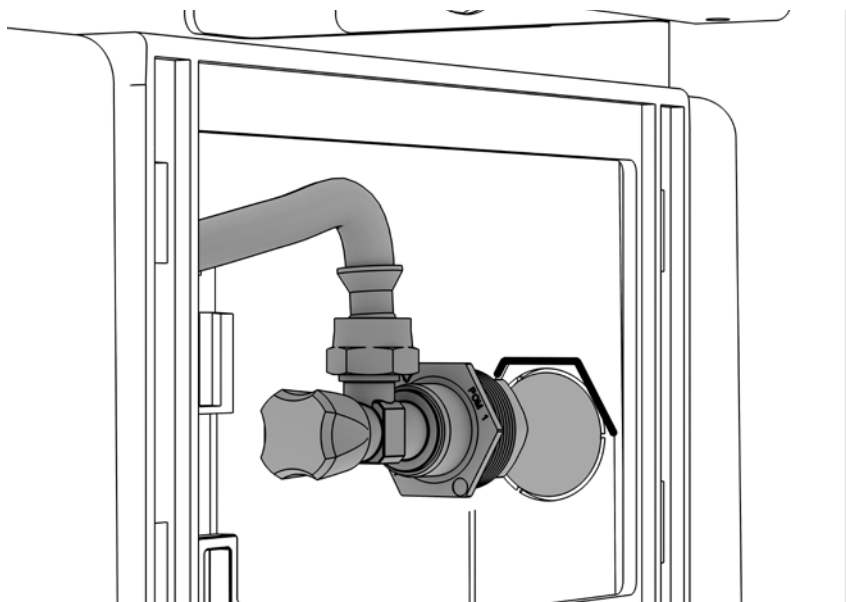

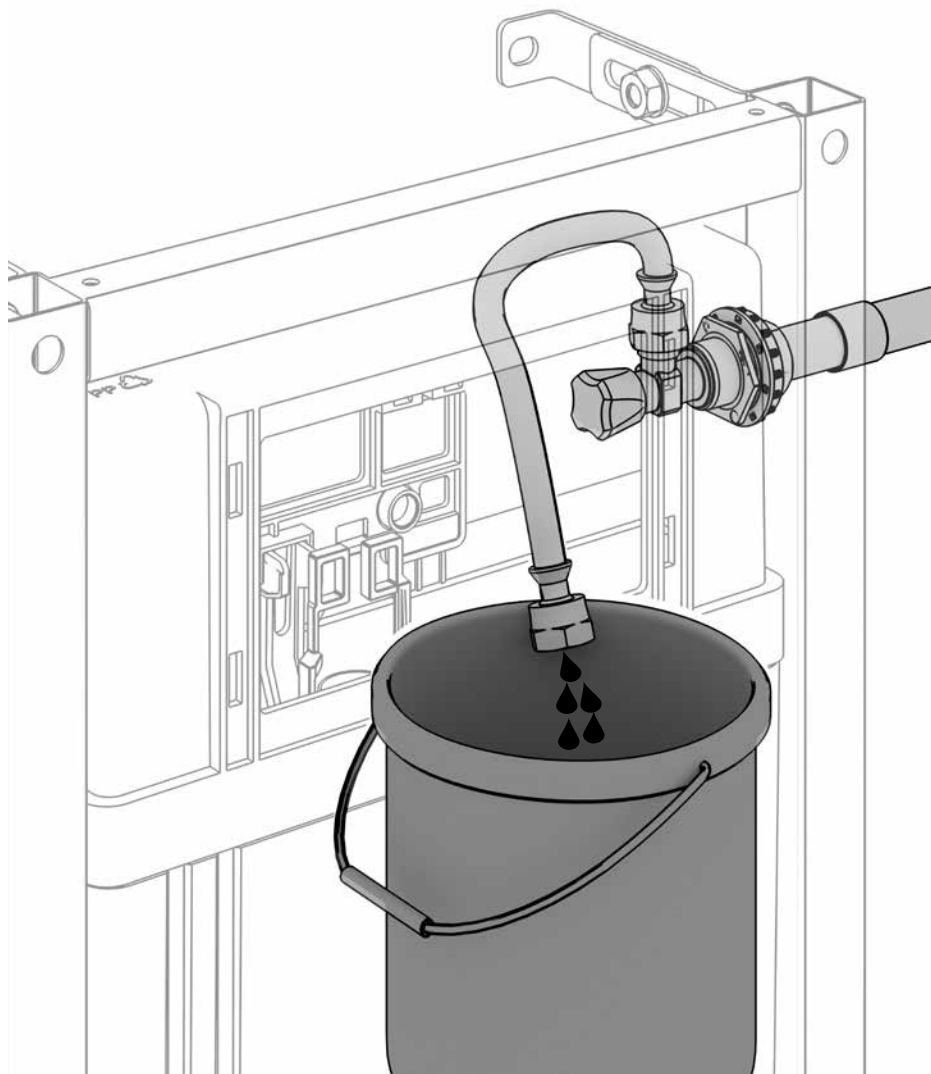


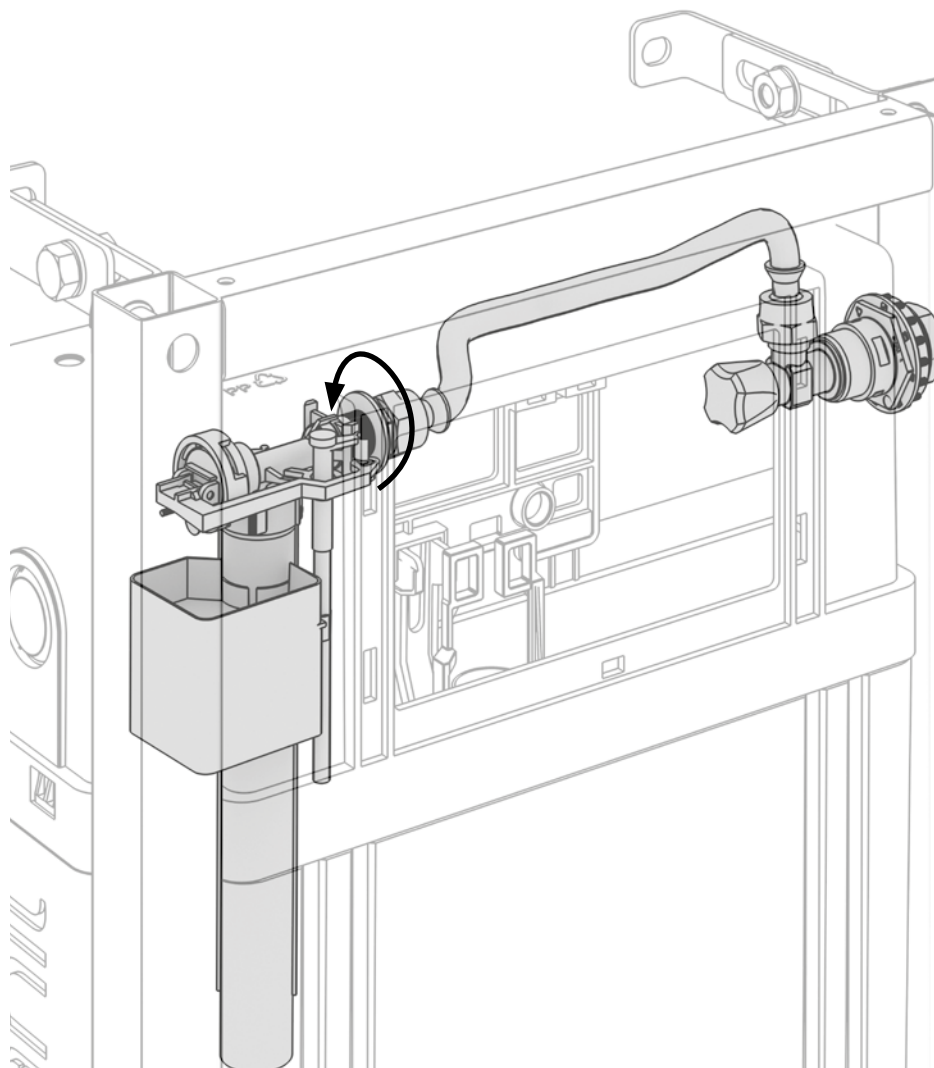


15





1

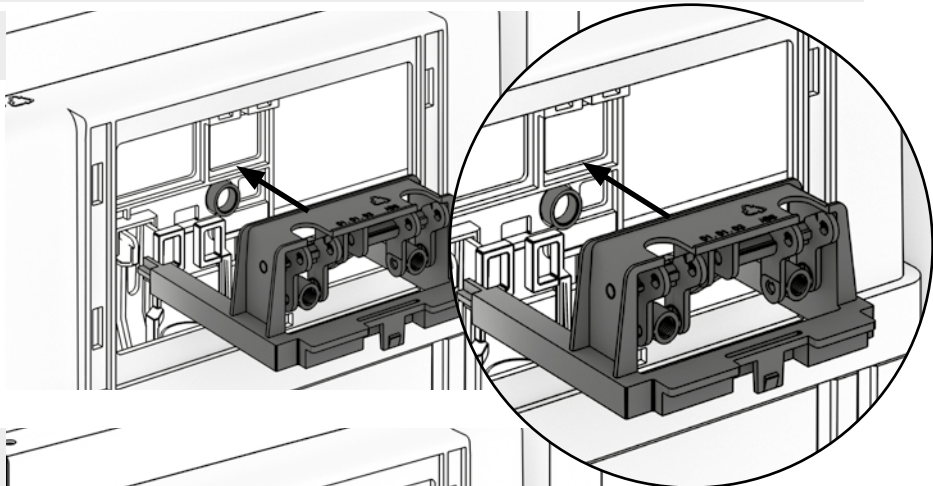


2

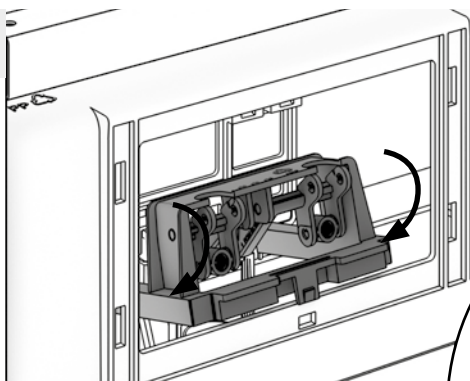


3

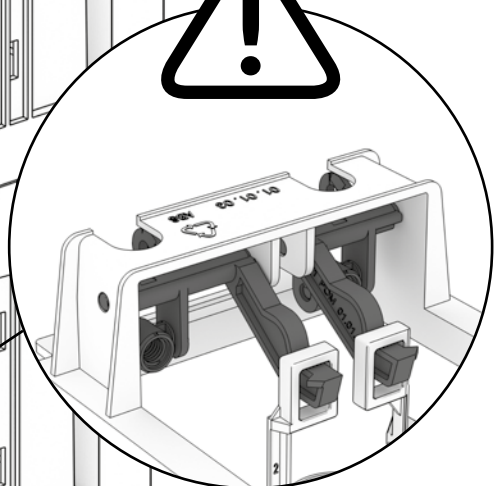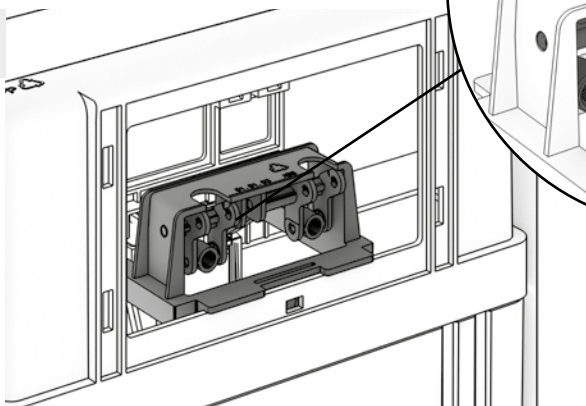


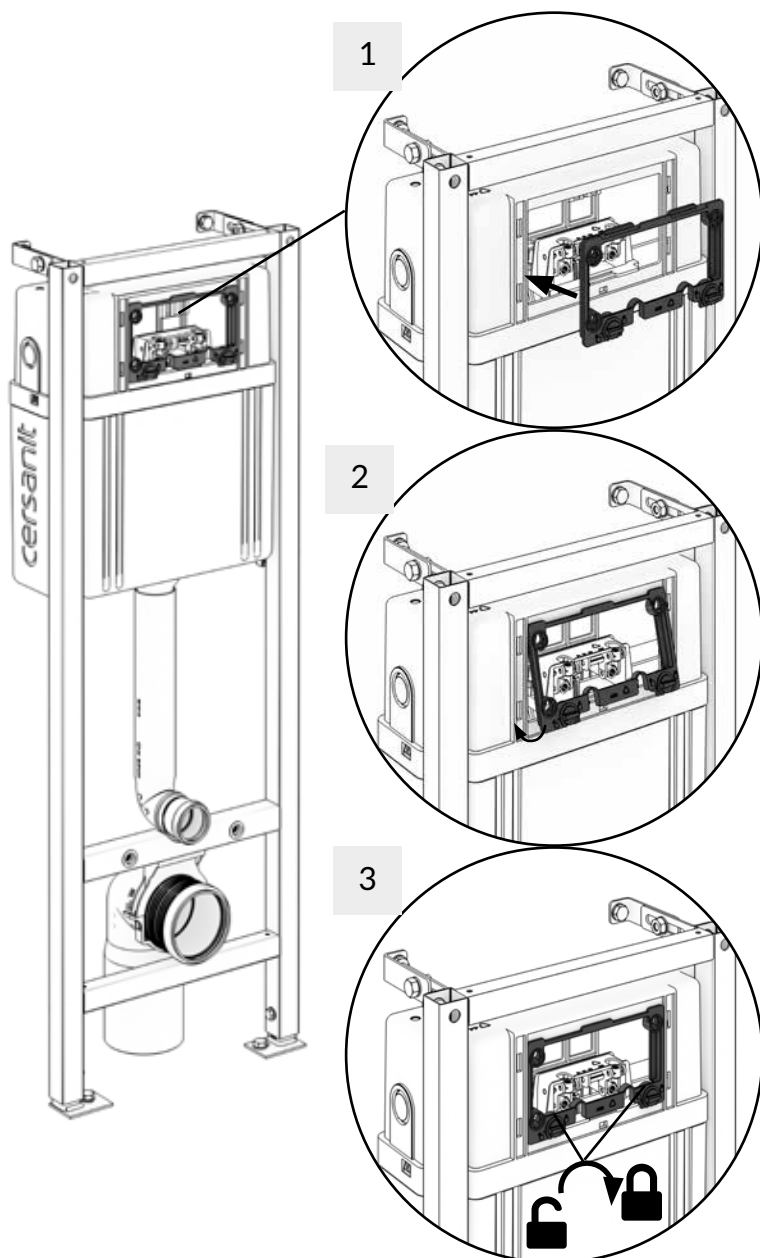

17

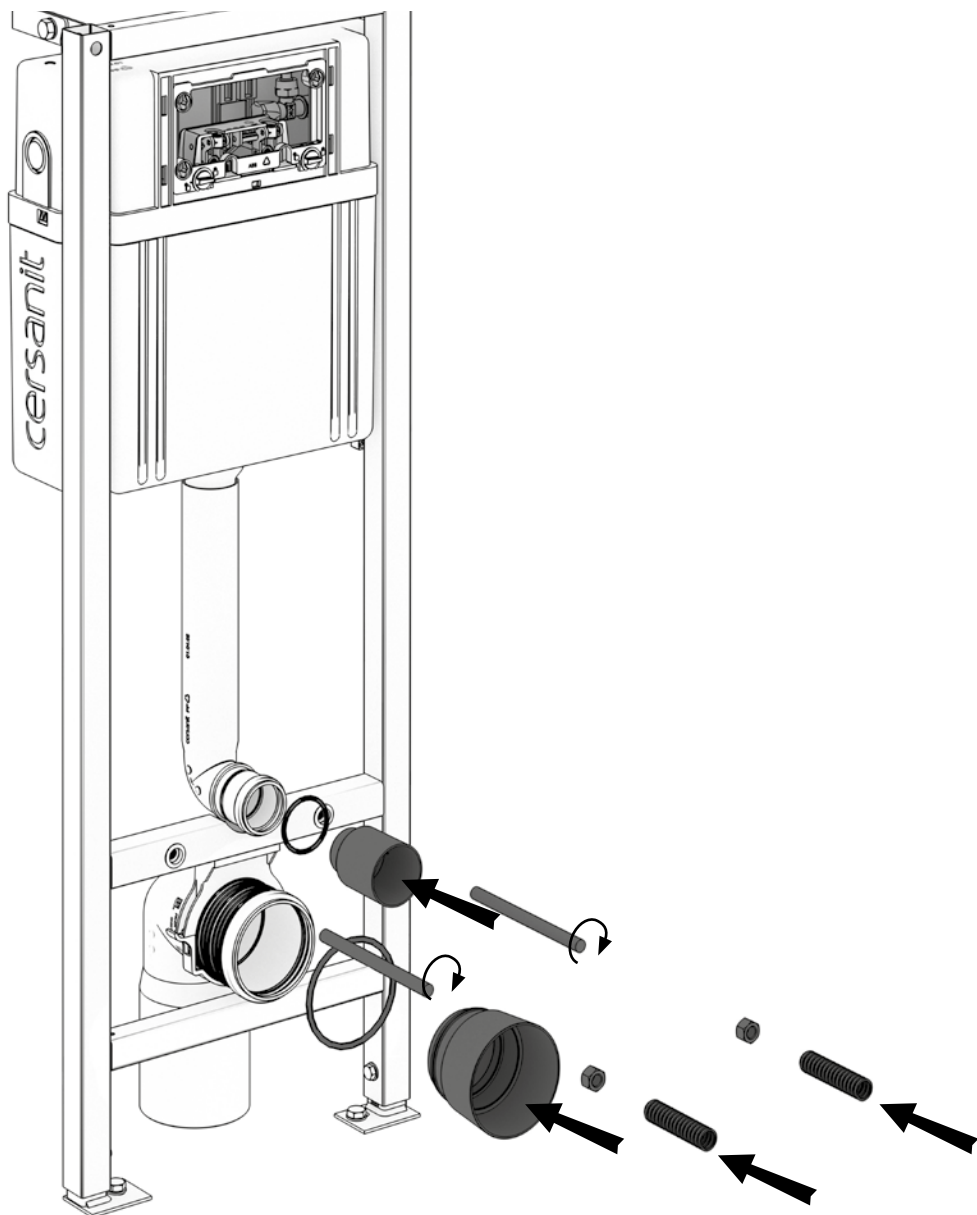



18.1

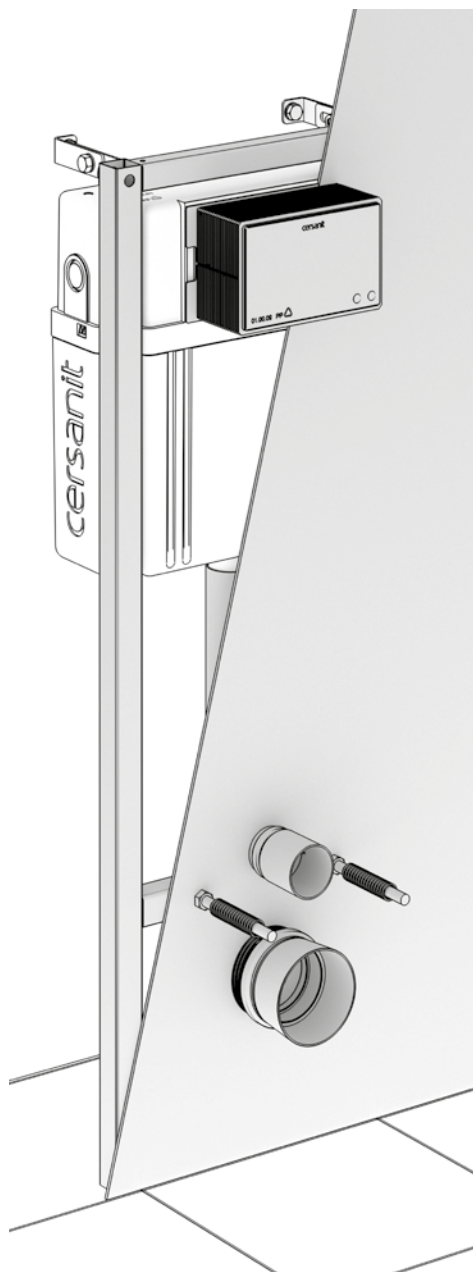

18.2

 x2

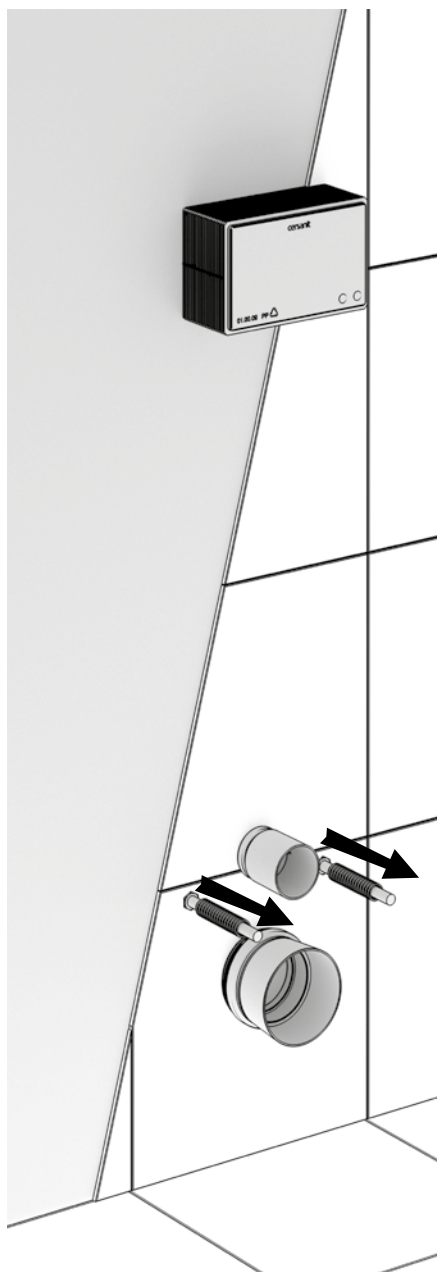


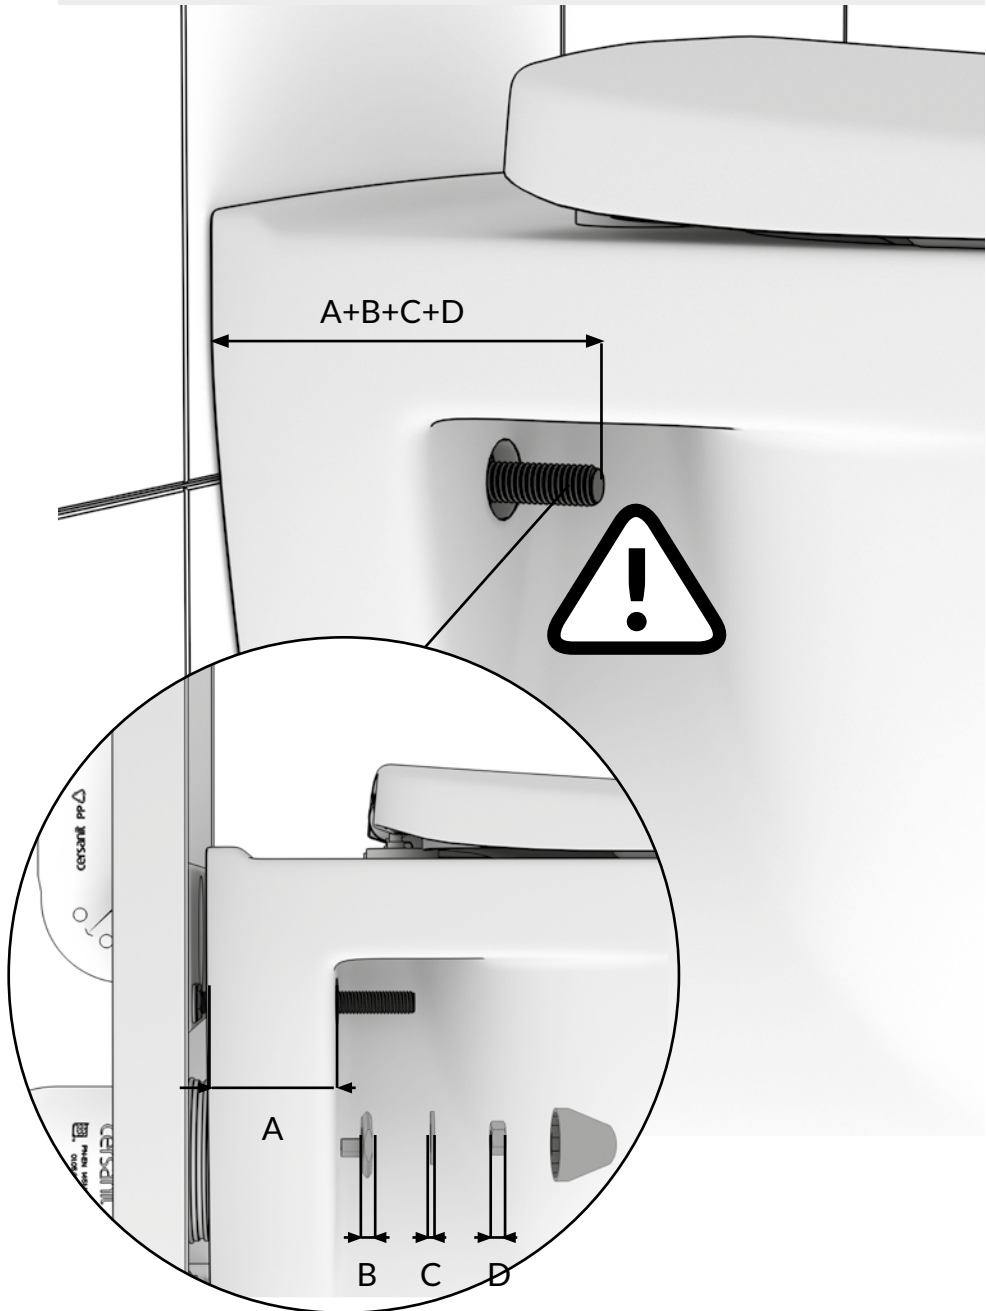


20




1

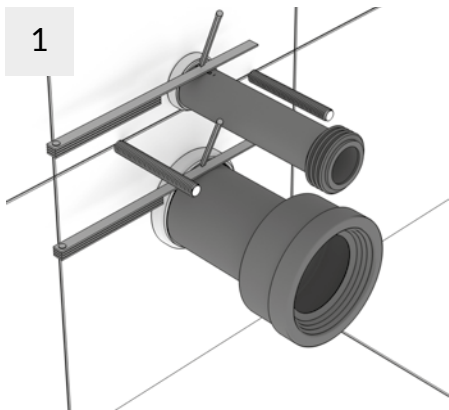


2

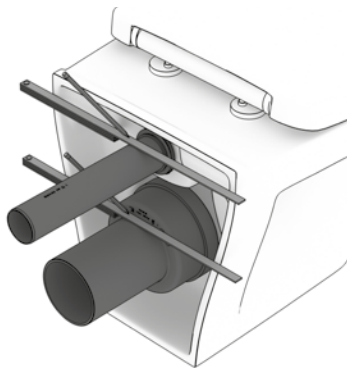

3

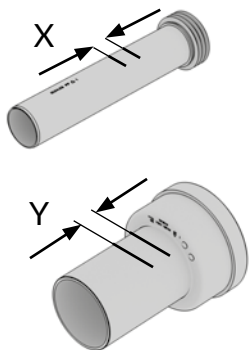


4

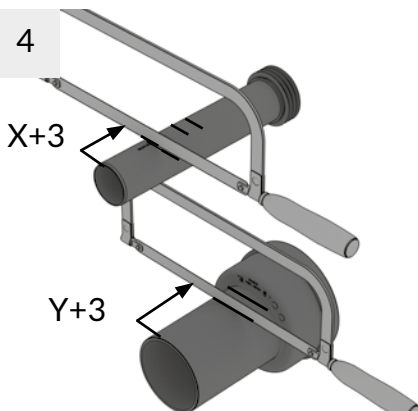

5




6

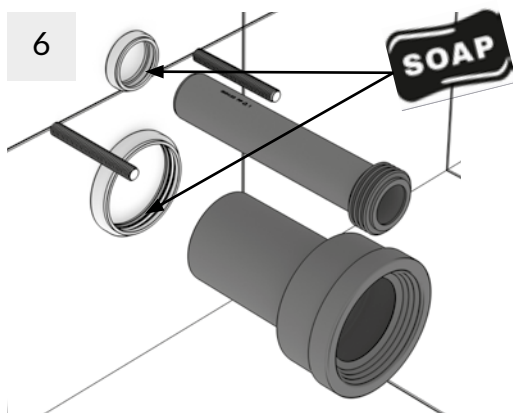


21



1

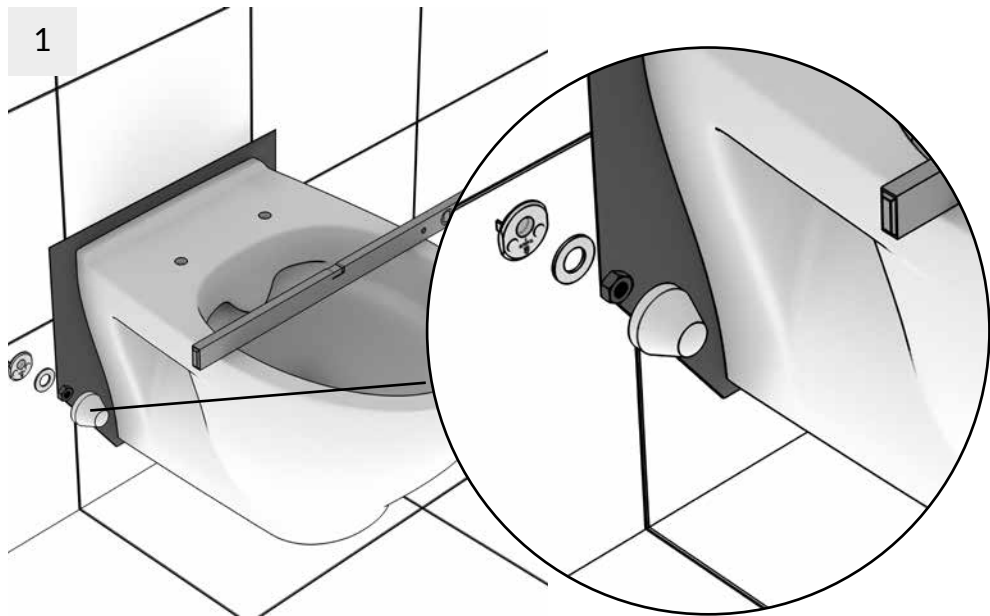

2

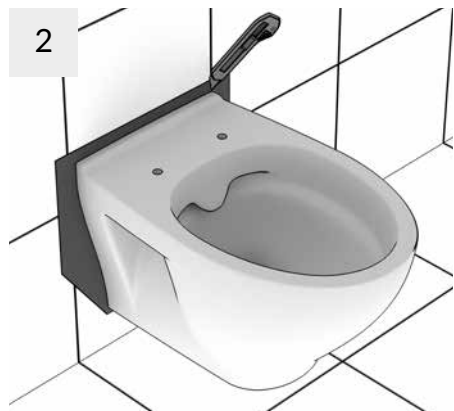


3







1

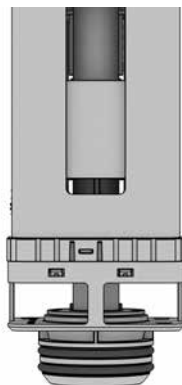

2

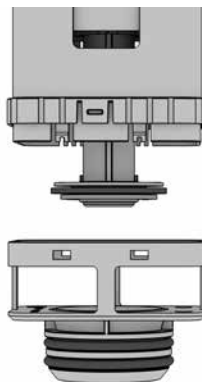

3

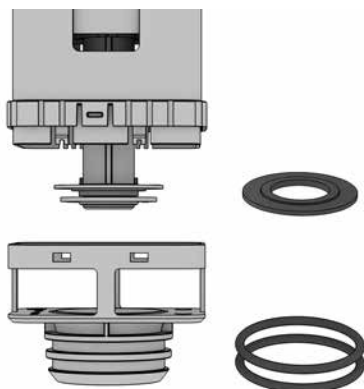



	<p>D</p>	<p>4</p>	<p>93 mm</p>
<p>CleanOn</p>	<p>A</p>	<p>4</p>	<p>115 mm</p>







SYSTEM

cersanit

801 01 44 44



www.cersanit.com

